





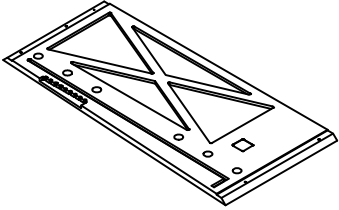
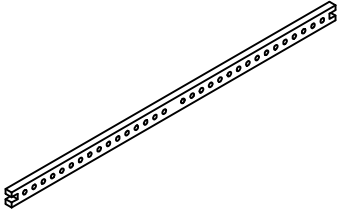
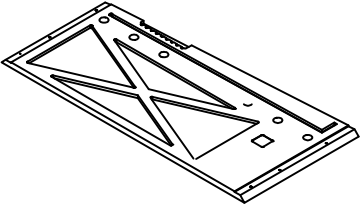
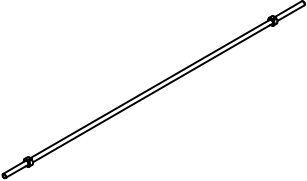
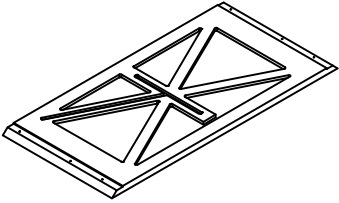

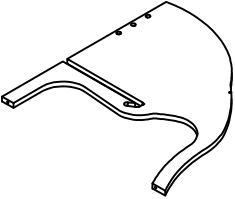

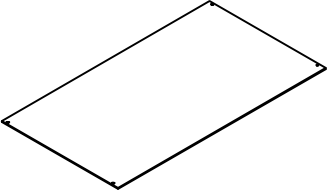

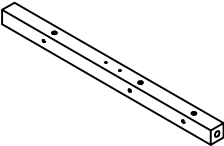



ASSEMBLY INSTRUCTIONS

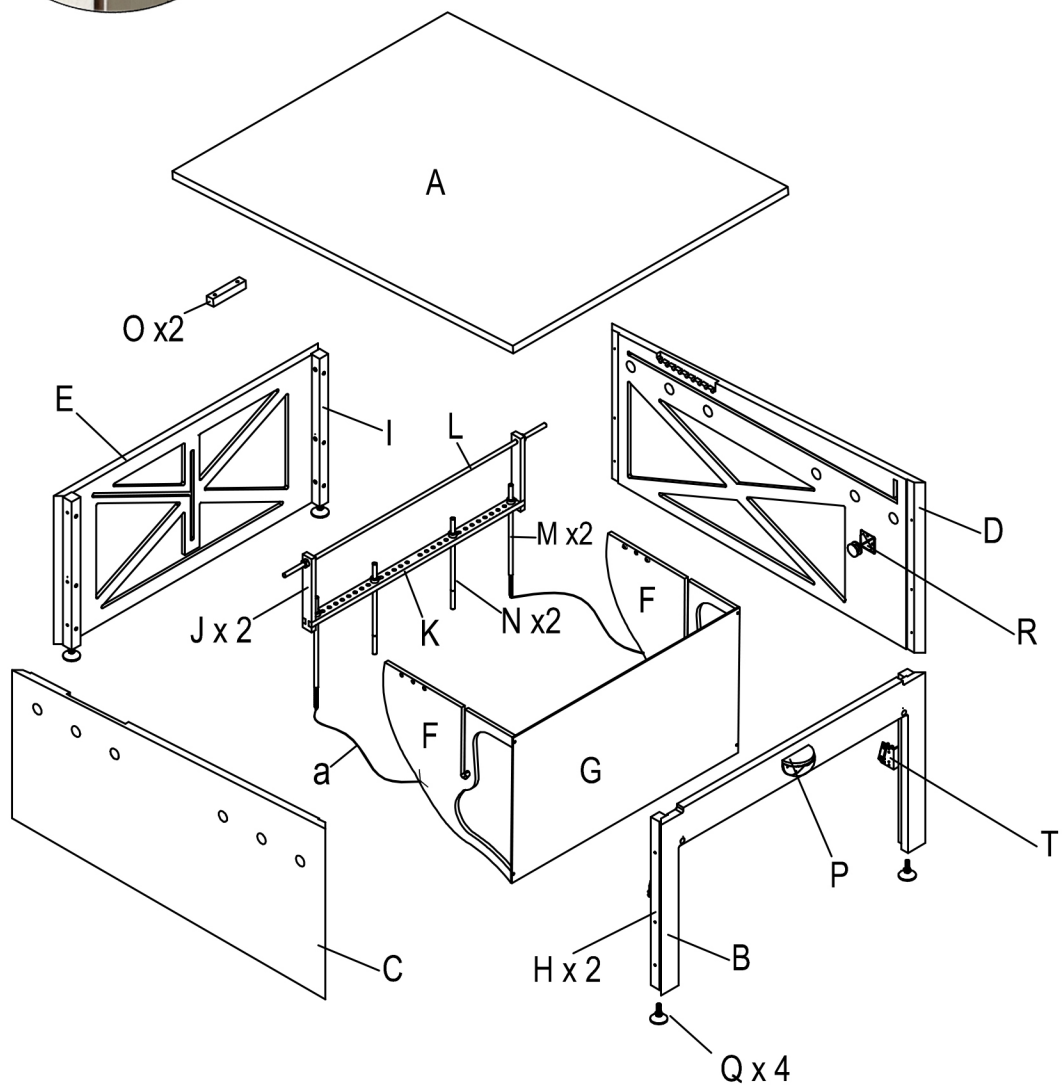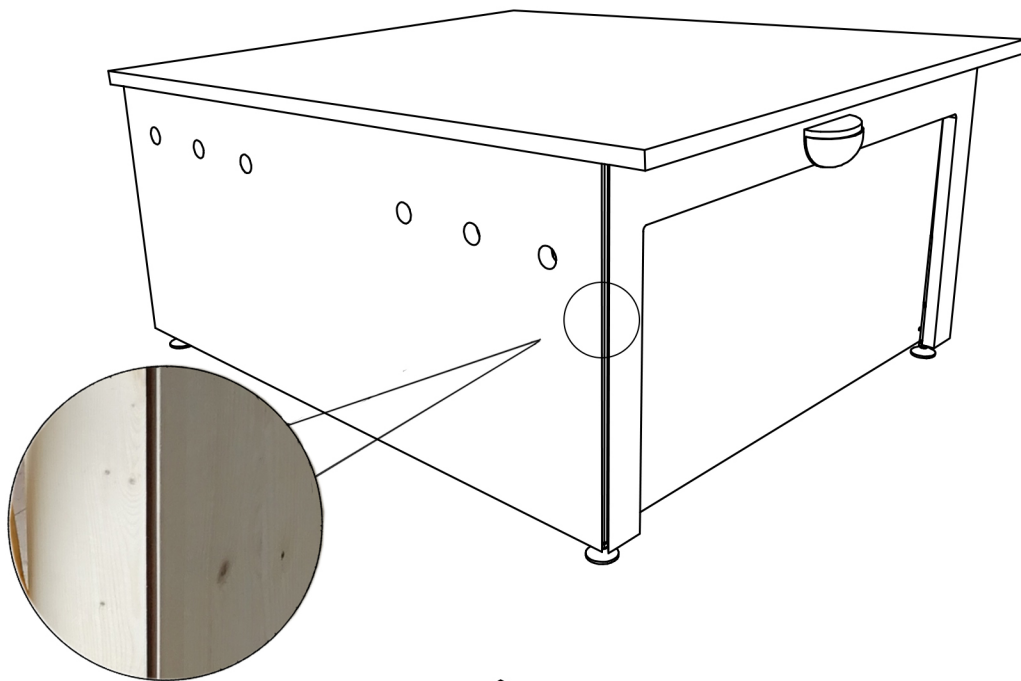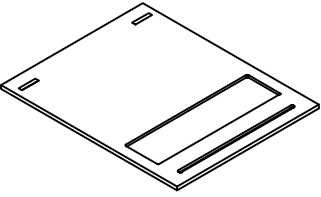

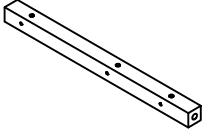

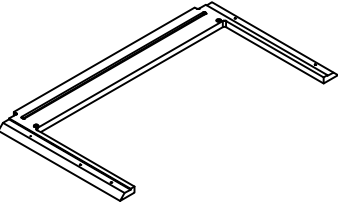









ASSEMBLY INSTRUCTIONS

PARTS

A		1	I		2
B		1	J		2
C		1	K		1
D		1	L		1
E		1	M		2
F		2	N		2
G		1	O		2
H		2	P		1


ASSEMBLY INSTRUCTIONS

PARTS


Q		4	Y	 3x16mm	14
R		2	Z		4
S		1	a		2
T		1	b		1
U		2			
V		2			
W		2			
X	 4x40mm	24			

ASSEMBLY INSTRUCTIONS


step 1

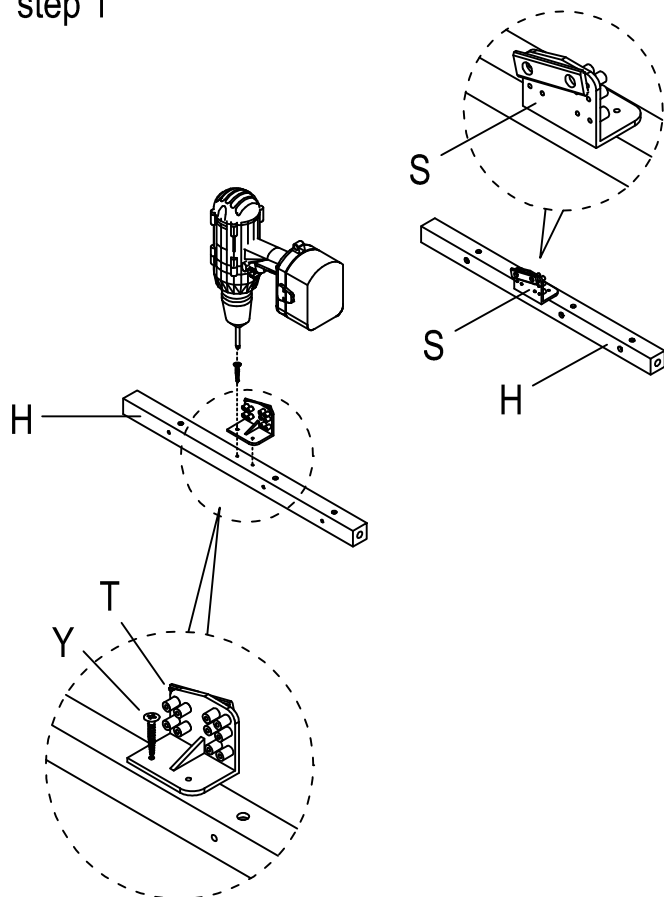

step 2

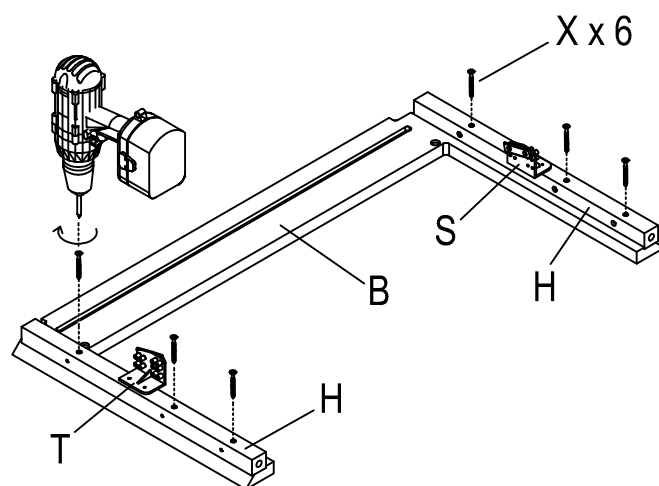


step 3

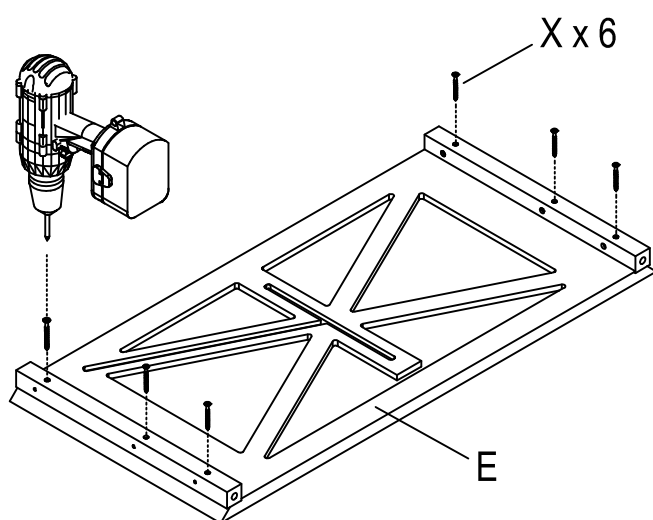


step 4

Mounting the door suspension 8x3x16

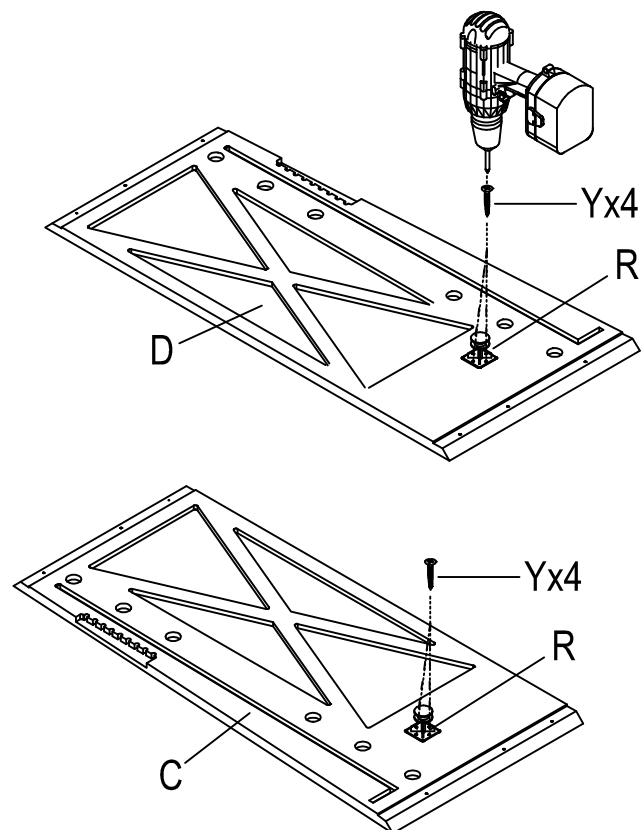


ASSEMBLY INSTRUCTIONS


step 5

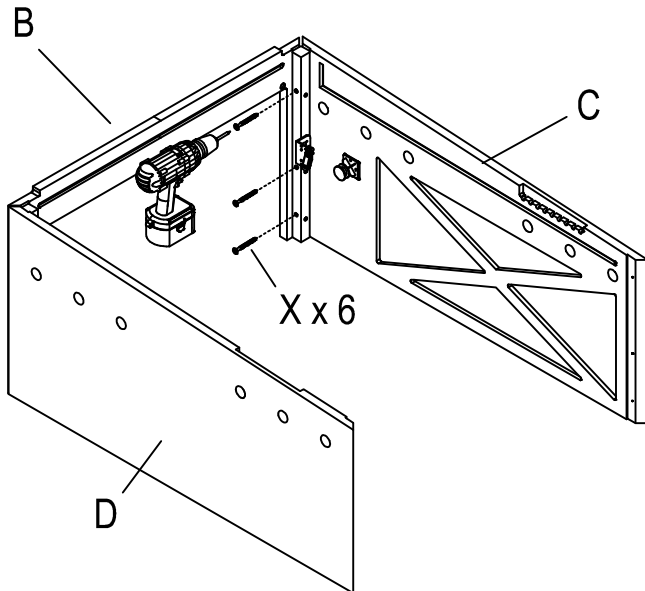

step 6

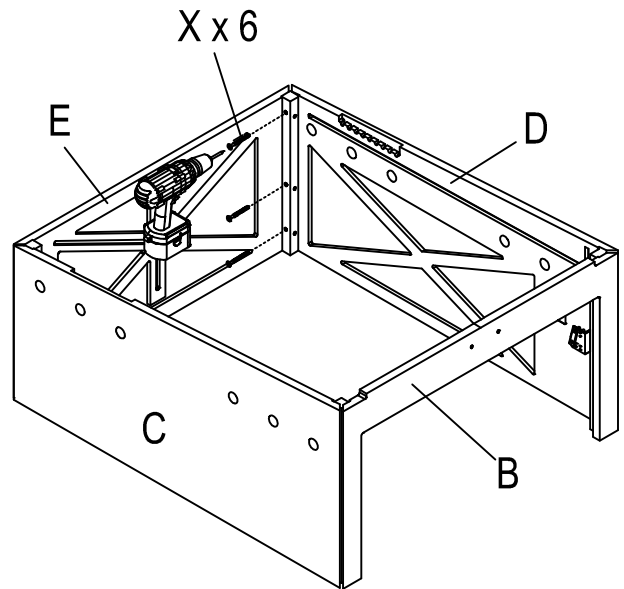


step 7

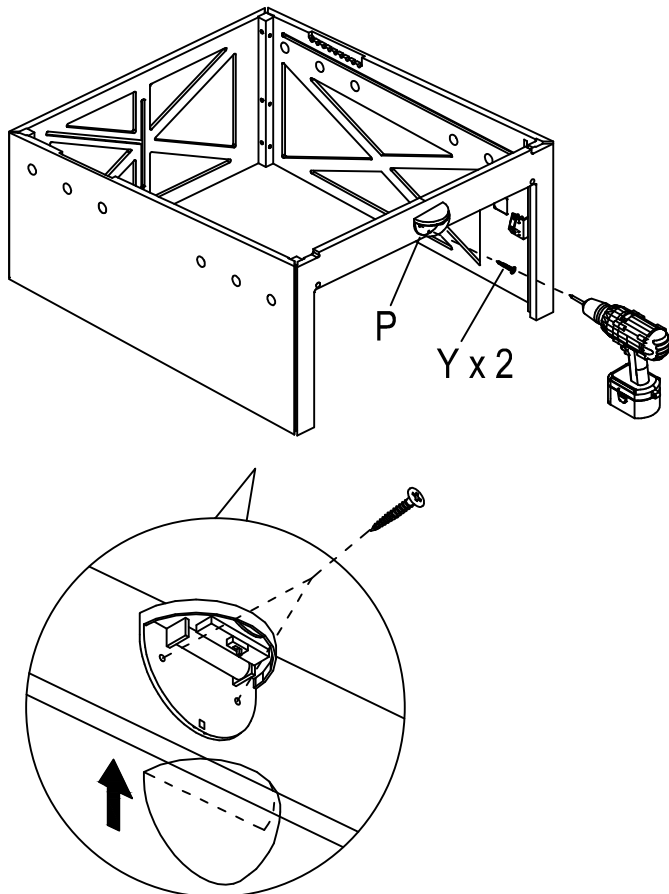


step 8

4x adjustable feet screw in lightly - place garage as shown

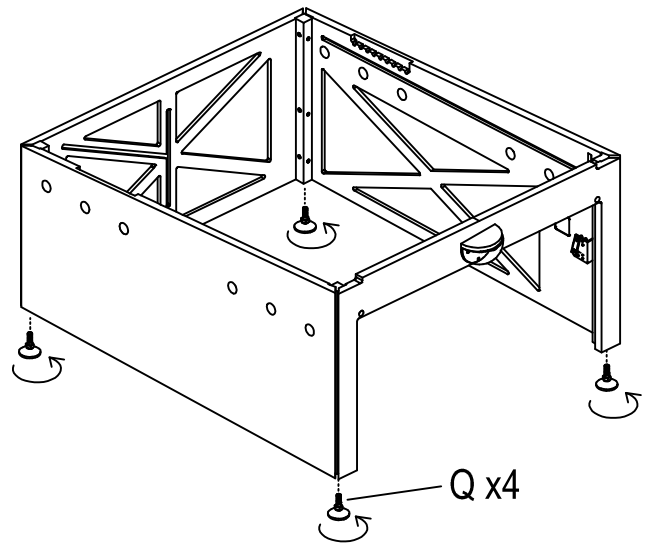


ASSEMBLY INSTRUCTIONS

step 9

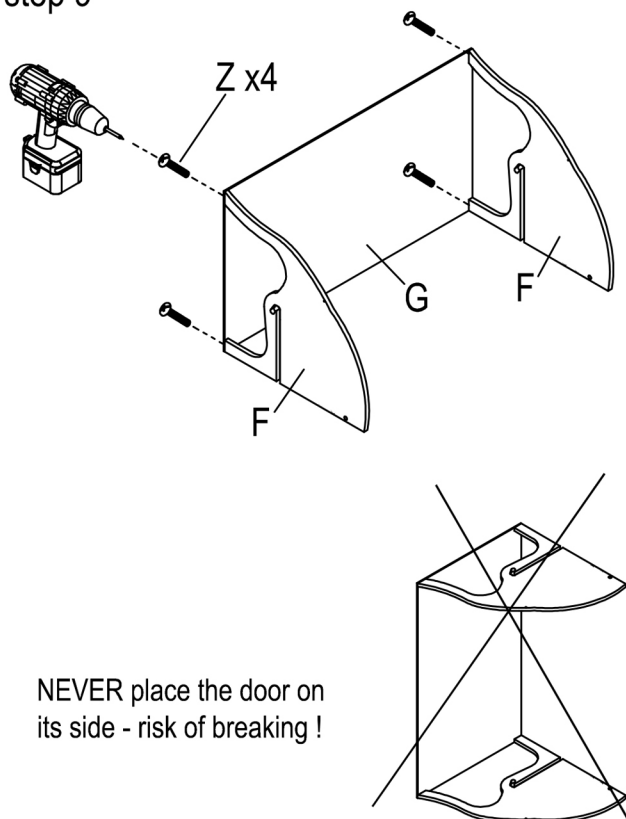

step 10


2 x M8x16 und 2x Dome nut
Dome nut outside !

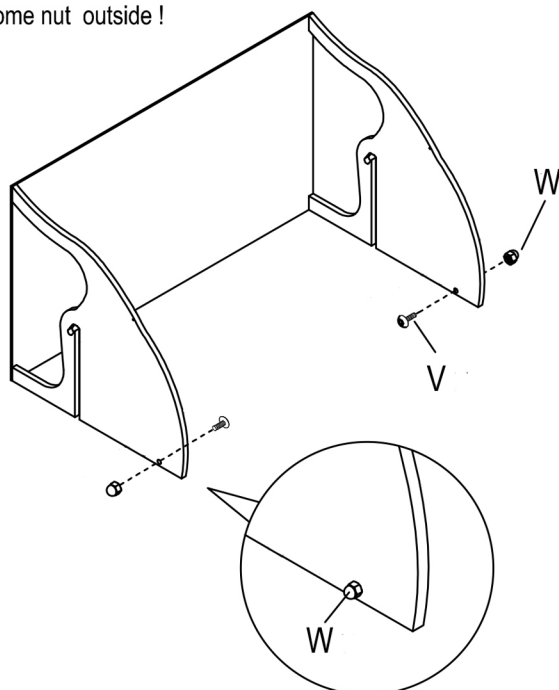


Mount weights and carry out fine adjustment: the more weights at the back, the faster the door opens :)
For AluDibond doors you have to screw down 2 weights on each side by hand

step 11

CORRECT DOOR SETUP

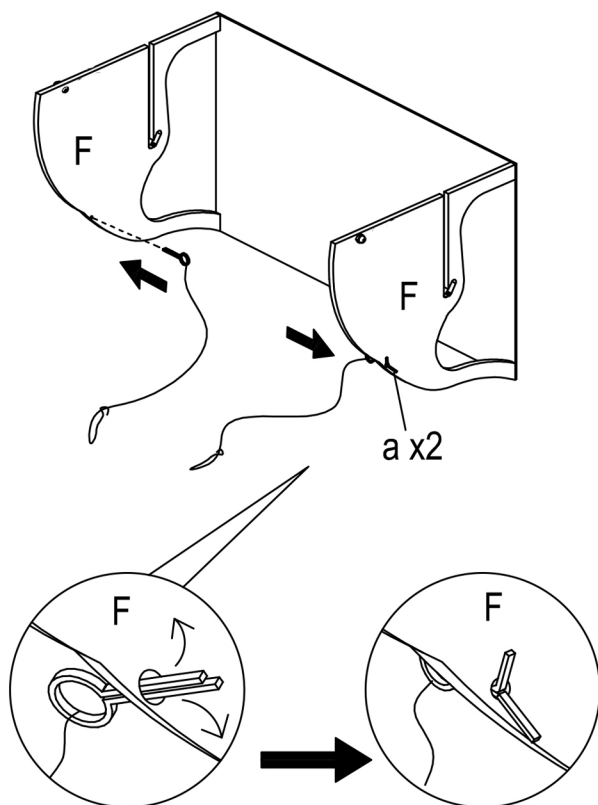


step 12

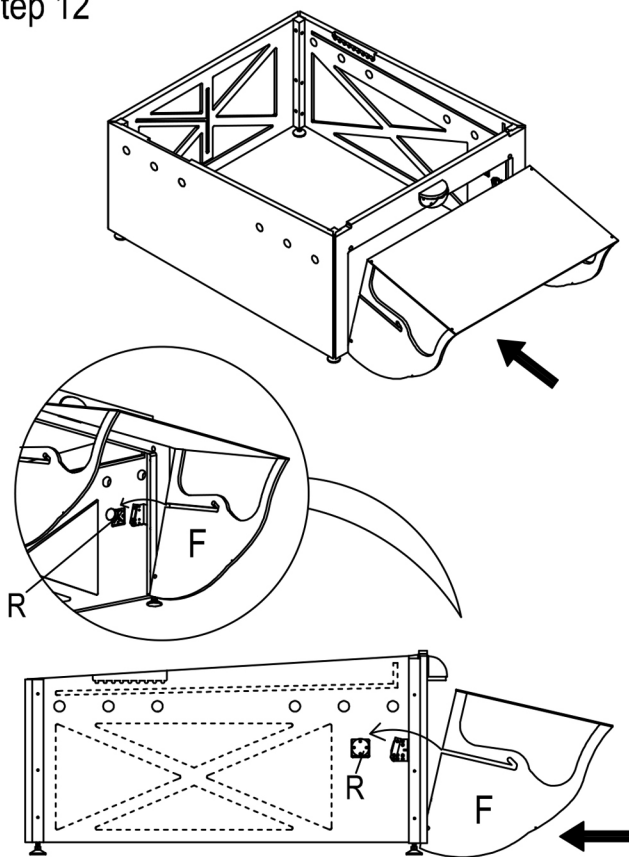


Push the door from the front onto the door suspension till snap in

ASSEMBLY INSTRUCTIONS


step 13

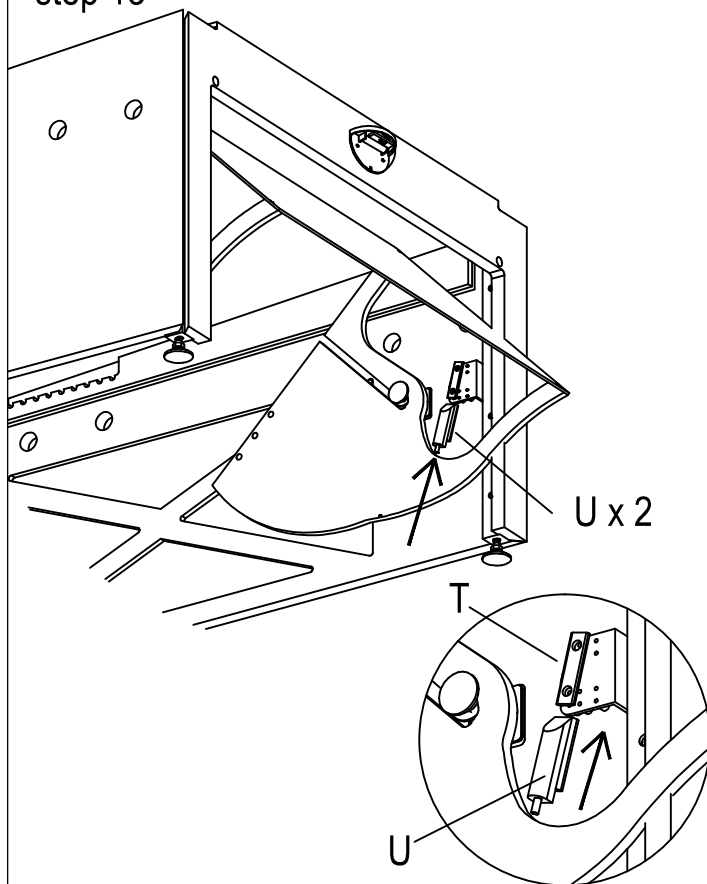

step 14

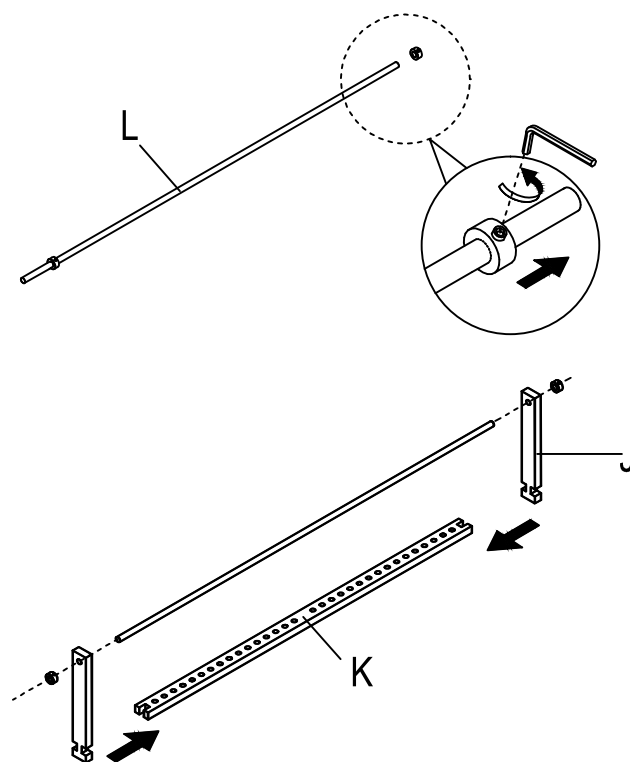


step 15

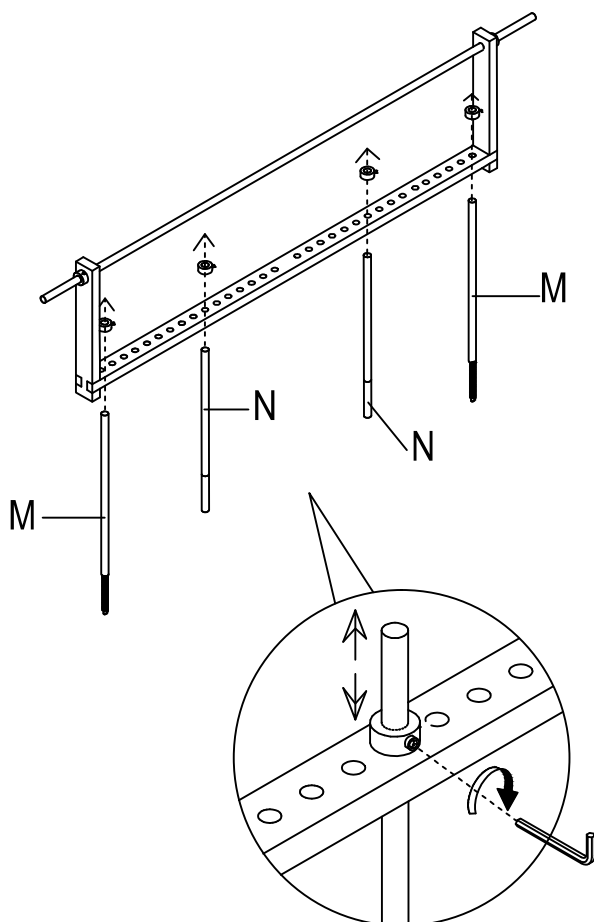


step 16

CORRECT SWING SETTING

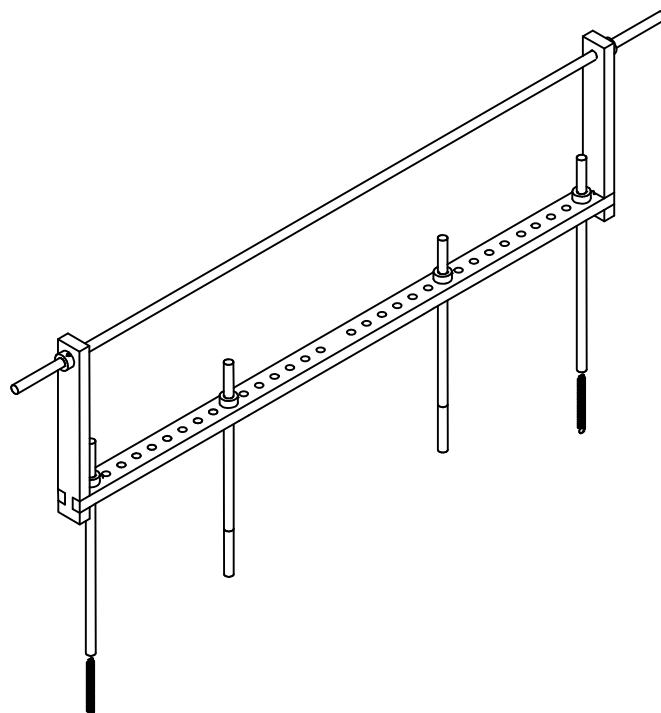


ASSEMBLY INSTRUCTIONS

step 17

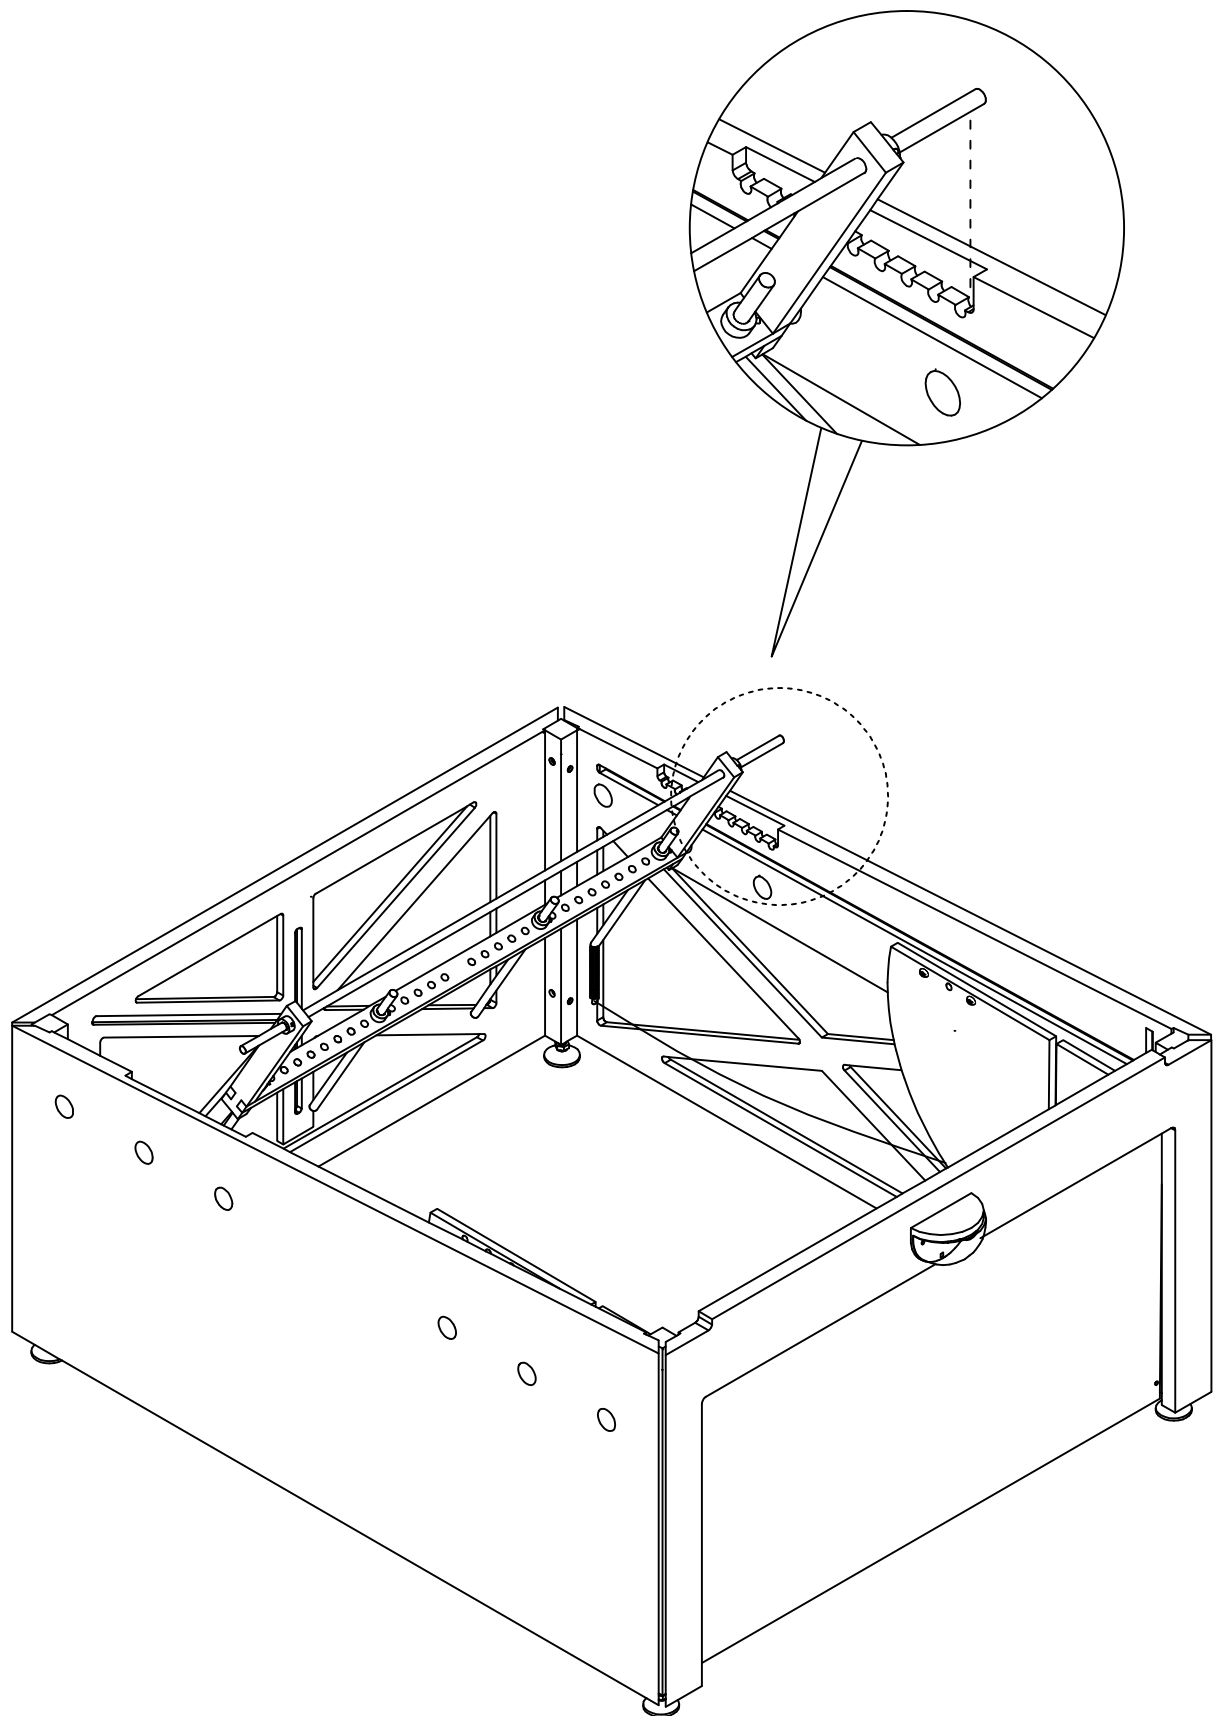

ASSEMBLY INSTRUCTIONS

step 18

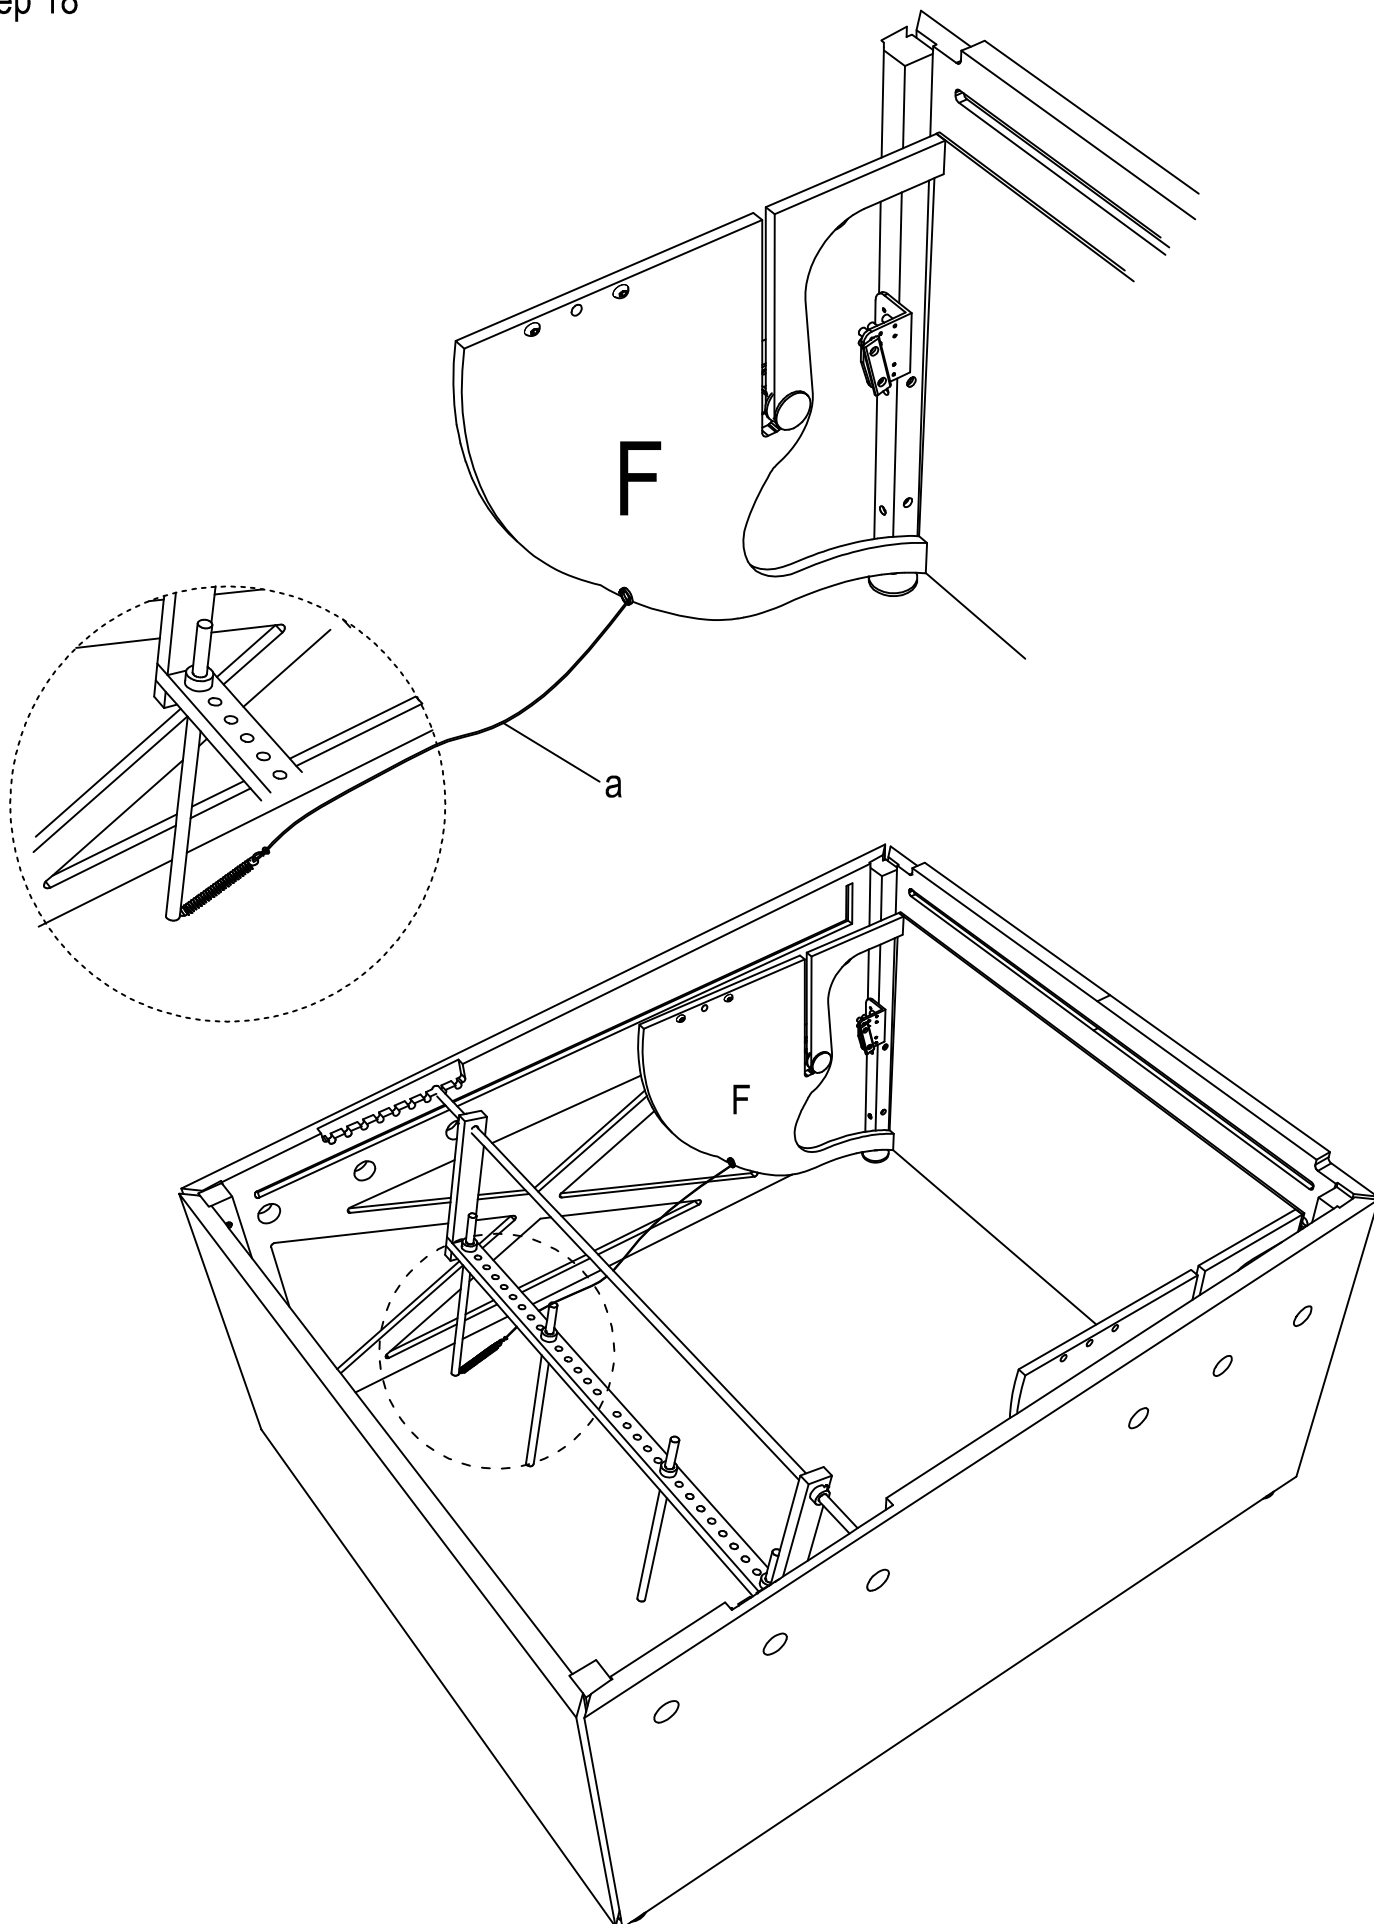

ASSEMBLY INSTRUCTIONS

step 17

